


# **Venus Series**

**Stand Alone & Modular Combo-free KVM Switch  
Quick Setting Guide**


**Rev 2.0**

## 1. Application Diagram

Venus 8 / 16 / 8 IP / 16 IP / 8 C5 / 16 C5 stand alone combo-free KVM switch:

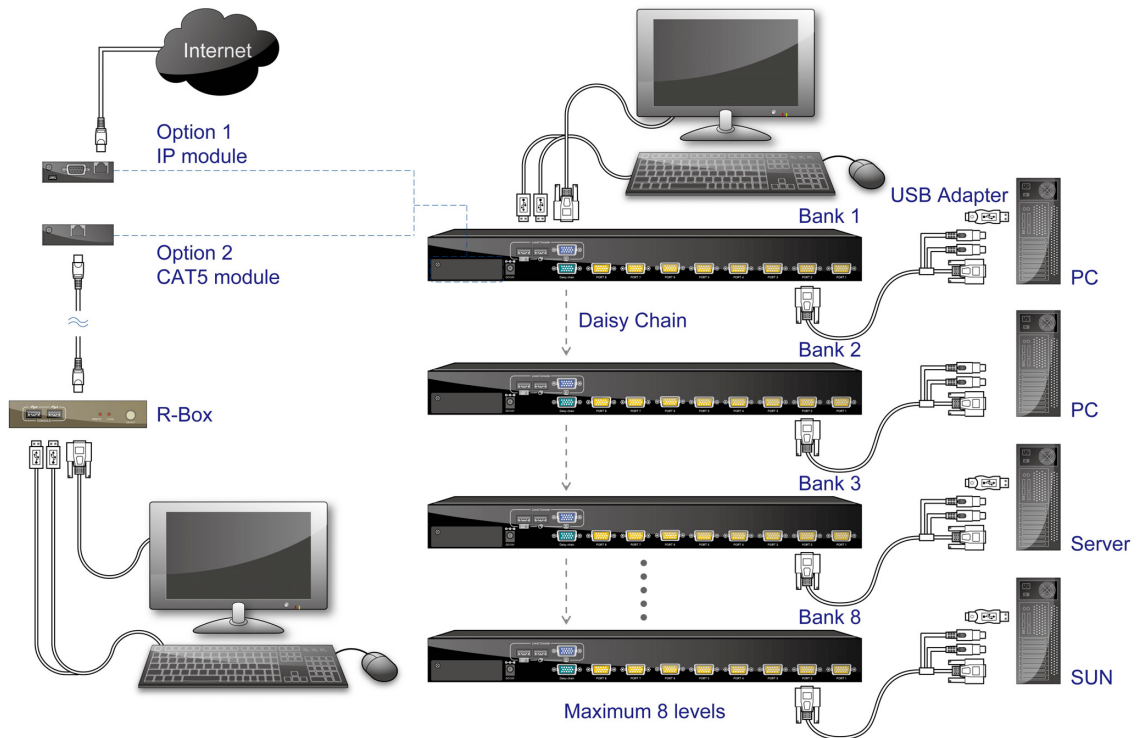

Venus 8D / 16D / 8D IP / 16D IP / 8D C5 / 16D C5 modular combo-free KVM switch:

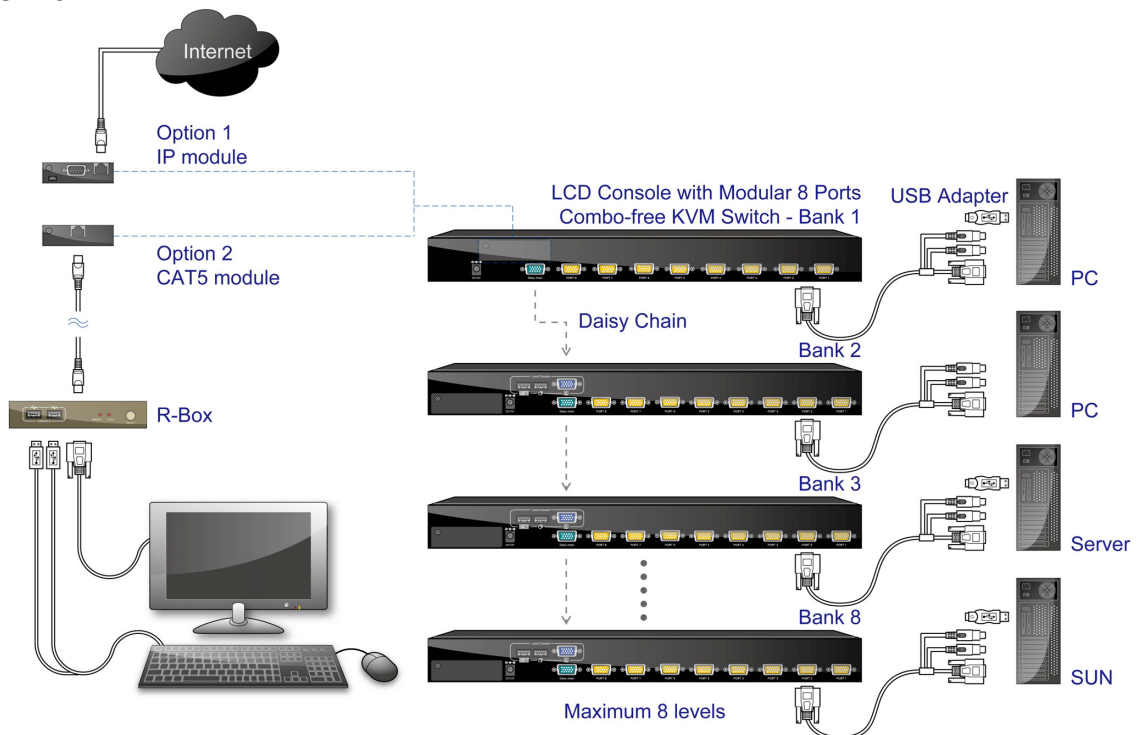

## 2. Package Contents

Venus 8 / 16 / 8 IP / 16 IP / 8 C5 / 16 C5 stand alone combo-free KVM switch:

- 1 x KVM Switch Unit
- 1 x CD-ROM (User's Manual)
- 1 x Quick Setting Guide
- 1 x 12V DC Power Adapter
- 1 x Rack Mount Kit
- 1 x KC-1515 Daisy Chain Cable (0.9 M)
- 2 x KC-1501C Signal Cable (with USB Adapter) (1.8 M)

Venus 8D / 16D / 8D IP / 16D IP / 8D C5 / 16D C5 modular combo-free KVM switch:

- 1 x KVM Switch Unit
- 1 x Quick Installation Guide
- 1 x LCD Console Mount Kit

## 3. Local Console Installation

Venus 8 / 16 / 8 IP / 16 IP / 8 C5 / 16 C5 - Connect the keyboard, mouse and monitor to the local console port. Turn on the monitor then power on the KVM Switch by plug in the power adapter.


Venus 8D / 16D / 8D IP / 16D IP / 8D C5 / 16D C5 – Combine the LCD Console and modular combo-free KVM switch.

## 4. PC / Servers Installation

- a. PS/2 computer – Use the signal cable with two PS/2 connectors.
- b. USB computer – Use the signal cable with PS/2 connector and USB adapter.

## 5. Hotkey

Enter Hotkey two times [within 2 Seconds]

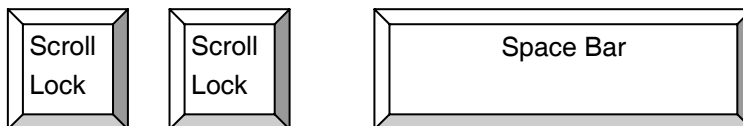

Command	Function
Space bar	Active OSD
↑	Previous Channel
↓	Next Channel
[1,2,...,8] bank, [01,02,...,16] port	First digit bank number start with 1 Second and third digits port number start with "01"

PgUp	Previous bank
PgDn	Next bank
“B”	Turn on / off beeper
“S”	Auto Scan
“U”	Console Security “ON” to “OFF”
“P”	User logout / login
“R”	OSD setting back to factory default value
“L”	Turn on / off power saving

## 6. On Screen Display (OSD)

### OSD Function Key

Esc :	Exit
Enter	Select
→ / ↑ / ← / ↓	Move
Ins	Edit
F1	Help
F2	Last OSD screen
PgUp	Previous Bank
PgDn	Next Bank

## 7. Power On

Turn on local console monitor and power on by plug in the power adapter, there will be login window at screen.

The default user name is all eight zero digits “00000000”...

The password is all eight zero digits “00000000”...

# Venus Series

## Stand Alone & Modular Combo-free KVM Switch

